

Windows 3.X Shortcut Keys and Ricoh RDC-300

- Connect camera to Com 1 (where your mouse is).
- Restart computer - windows will detect that no mouse is present, click [enter] to accept.
- At the c:\ prompt, type in [win] to start Windows 3.X
- After Windows opens, hold down the [alt] key and [W] to bring down the Window menu.
- Use your down arrow to get to [Photostudio] and hit [enter].
- Hit [enter] to start PhotoStudio.
- Turn the RDC-300 to the Play Mode
- [Alt] [F4] to close the Shortcut Menu in PhotoStudio Lite
- [Alt] [F] to bring down the File Menu
- [D] to select Download from Ricoh Camera
- Use the [Tab] key and the up and down arrow keys to select download criteria
- [Alt] [O] to Okay download options
- At this point camera connections should be made, either use the [Tab] key and the [Spacebar] to select individual images to download or [Alt] [A] to select all
- [Alt] [O] to Okay selected images for download
- Once downloading is complete, [Alt] [F4] to close album - will be prompted to save changes
- Give the album a unique name and [Alt] [O] to save as such
- [Alt] [F] to bring down File Menu
- [X] to exit Photostudio Lite
- [Alt] [F4] and Exit Windows
- Turn your computer off and reconnect your mouse