

**RICOH**<sup>®</sup>

**RDC-5300**  
DIGITAL CAMERA


Quickstart



# Congratulations

Thank you for purchasing the Ricoh RDC-5300 digital camera. The RDC-5300 is a state-of-the-art digital camera designed to make it easy for you to capture high resolution digital images. Please follow these quick start tips to begin taking pictures right away. Enjoy.

## Camera controls

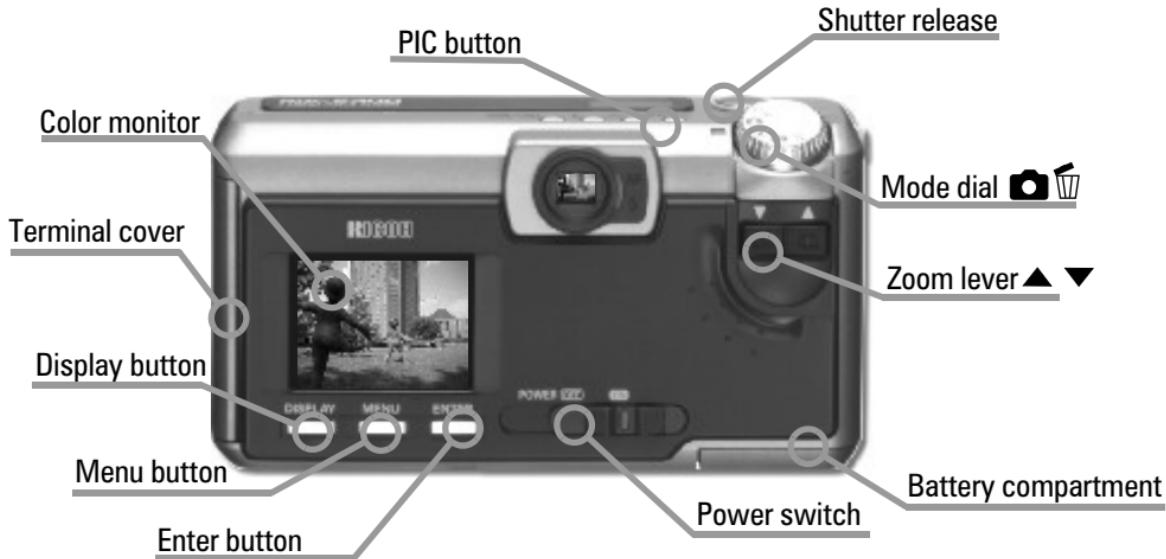

Watch the enclosed video tape and refer to your camera's user manual for more detailed information. Also, take a moment to complete the enclosed registration card so we can keep you informed of important product updates.

# Picture taking


## 1 Preparing the camera

- Open the battery compartment door.
- Insert the supplied AA batteries.
- Slide the power switch to turn the camera on.



## 2 Setting the date and time

- Rotate the mode dial to the “SET-UP” position.
- Use the ▲ or ▼ to select “date setting”.
- Press “DISPLAY” to choose the date format.
- Press “ENTER” to change the date.
- Use the ▲ or ▼ button to set the date.

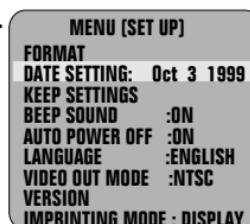


## 3 Taking a picture

- Rotate the mode dial to .
- Press “PIC” to select the resolution and compression.
- Use the ▲ or ▼ button to zoom your subject in or out.
- Gently press “SHUTTER RELEASE” half way down to set the exposure and focus. Gently press all the way down to take a picture.



## 4 Playing a picture back

- Rotate the mode dial to  .
- Press the  or  button to view your pictures.

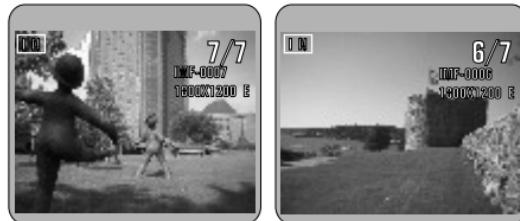

## 5 Deleting pictures

- Rotate the mode dial to  .
- Press the  or  button to select the erase mode and press "ENTER".
- If you selected ERASE SINGLE IMAGE:  
Press the  or  button to select the image you wish to delete and push "SHUTTER RELEASE".
- If you selected ERASE ALL IMAGES:  
Press "SHUTTER RELEASE".
- If you selected ERASE SELECTED IMAGES:  
Press the  or  button to select the images you wish to delete and push "ENTER" to tag them for deletion.  
Press "SHUTTER RELEASE" to erase the tagged images.

